



SINCE 1908
wessels
company



How To: Check Bladder Tank Integrity with WessView®



Has your WessView® bladder tank integrity monitor turned **RED**? If so, follow the steps below to troubleshoot.

STEP ONE: Depress the tank's air valve. If water comes out, the bladder tank may have failed. Proceed to step two.

If no water comes out, pre-charge your tank. If pre-charge holds, please contact your contractor to request WessView® replacement(s).



WessView® can be triggered by highly humid or moist air. When pre-charging, make sure to use dry air or nitrogen.

STEP TWO: Isolate your tank and drain off water.

STEP THREE: Pre-charge your tank to the required setting (line pressure in supply line).

STEP FOUR: Observe if air comes out from the water supply connection. If air is leaking, then the tank may be faulty and may require repair or replacement.

If pre-charge holds and the air side of the tank is empty of water, please contact your contractor to request WessView® replacement(s).

Visit us online at westank.com/wessview for more information