

Determine which PRV your unit is equipped with:

- a. Unit A – Proceed to section 1
- b. Unit B – Proceed to section 2

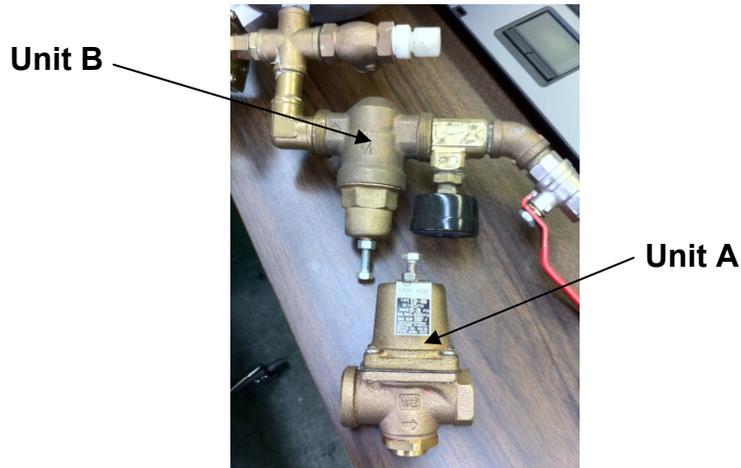


Figure 1


Section 1:

- 1. Unbolt top section of PRV (Figure 1)
- 2. Remove parts
- 3. Gently clean all parts using water and rag.
- 4. Unscrew bottom section of PRV (Figure 2)
- 5. Remove parts
- 6. Gently clean all parts using water and rag.
- 7. Reassemble PRV unit in reverse order.



Figure 2



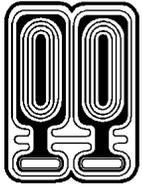

SINCE 1908
wessels
company

SERVICE

TYPE: GMP PRV Cleaning Instructions

MODELS: GMP
Submittal Sheet No. S-0579

Date: 4-25-11

Section 2:

1. Unscrew top section of PRV (Figure 3)
2. Remove parts
3. Using vise grips, pull out strainer.
This may require some force.
4. Inspect strainer assembly for damaged
or obstructed seals (Figure 4)
5. Gently clean all parts using water and
rag.
6. Reassemble PRV unit in reverse order.

Figure 3



Figure 4

