



## **FXA BLADDER REPLACEMENT INSTRUCTIONS**

### **MODELS FXA-35 AND FXA-50**

1. Tank must be drained and all pressure released.
2. Bladder is attached to tank at both ends of the tank. To remove bladder from tank, remove all bolts from cover plate.
3. You will now be able to push bladder aside. Reach into tank and you will find that the bladder has a tab at the far end which has been slipped over the extension of the Schrader valve and is held in place with a threaded washer. Unscrew washer (counter clockwise) and this will release the bladder.
4. Pull out bladder and install new bladder by re-attaching to Schrader valve.
5. To complete bladder attachment, you will note that the bladder has the gasket molded with the bladder. Make sure the bladder is not twisted on the interior of the tank.
6. Re-attach the cover plate to make an air and water tight seal.
7. Re-charge tank to 2 P.S.I. under low system pressure.
8. Apply a soapy water solution to check for air leaks.