



## **FXA BLADDER REPLACEMENT INSTRUCTIONS**

### **MODELS FXA-85 THROUGH FXA-800L**

1. Tank must be drained and all pressure released.
2. Bladder is attached to tank at both ends. To release bladder remove jam nut holding bottom fitting. This fitting can now be pushed up inside the tank and bladder. To release bladder from opposite end, remove all nuts from flange and then take off cover plate.
3. You will now be able to reach in and remove bladder. Remove strainer assembly from inside bladder.
4. To install new bladder, insert strainer assembly into bladder and then carefully position new bladder into tank so that strainer assembly allows nipple to protrude through hole in bottom of tank.
5. Install jam nut to a snug fit.
6. To complete bladder attachment, you will note that the bladder has a gasket molded right with the bag. Make sure the bladder is not twisted on the interior of the tank.
7. Re-attach cover plate to make an air and water tight seal.
8. Re-charge tank to 2 P.S.I. under low system pressure.
9. Apply a soapy water solution to check for air leaks.