



NLAP BLADDER REPLACEMENT INSTRUCTIONS

MODELS NLAP-90 THROUGH NLAP-1100

1. Tank must be drained and all pressure released.
2. Bladder is attached to tank at top. To release bladder, remove all nuts from flange and then take off cover plate.
3. You will now be able to reach in and remove bladder.
4. Insert replacement bladder. Rolling the bladder up will ease installation.
5. To complete bladder attachment, you will note that the bladder has a gasket molded right with the bag. Make sure the bladder is not twisted on the interior of the tank.
6. Re-attach cover plate to make an air and water tight seal.
7. Re-charge tank to low system pressure (Auto fill setting).
8. Apply a soapy water solution to check for air leaks.

